
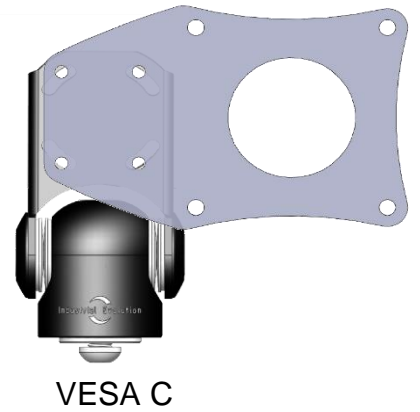


Installation Instructions
 Ford Ranger PX (2016-21)

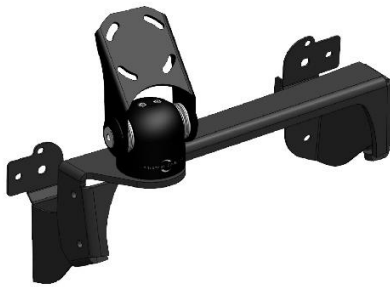

Step	Instructions
------	--------------

1

Remove left & right air vents.



2


Remove lower left & right plastic trim pieces.



- 3 Remove large central plastic piece (be careful not to bend this part in the middle)



- 4 Remove 8 x screws indicated.

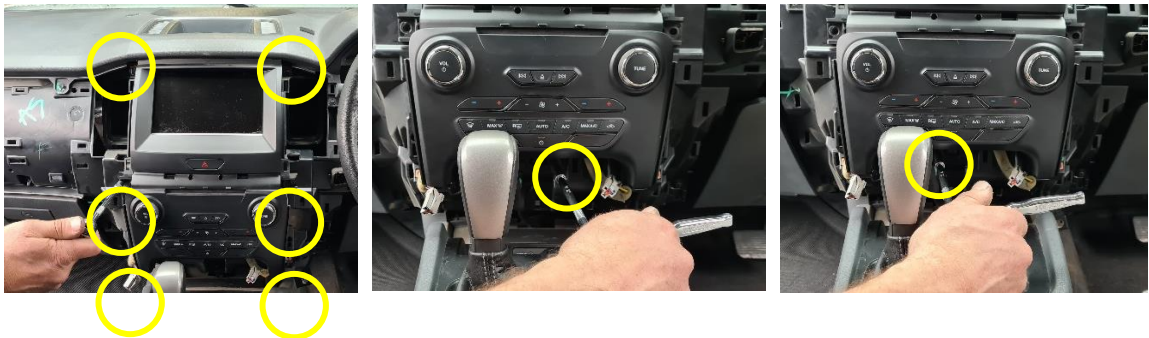

- 5 Remove lower cover and unplug 12V auxiliary jacks.




- 6 Gently wedge open top console, then loosen the front dash by hand.




7

Unplug and detach front dash.

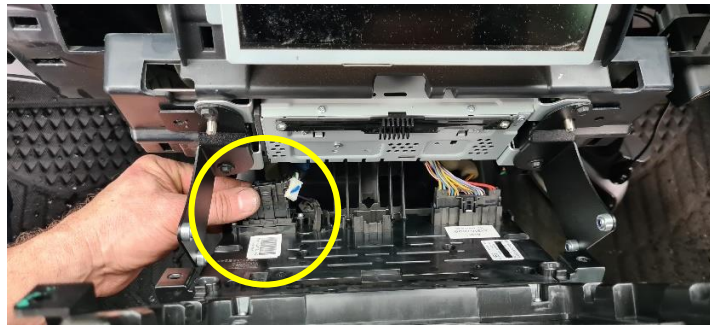


8

Remove 2 x screw as indicated. Install right side bracket using original 2 x screws.

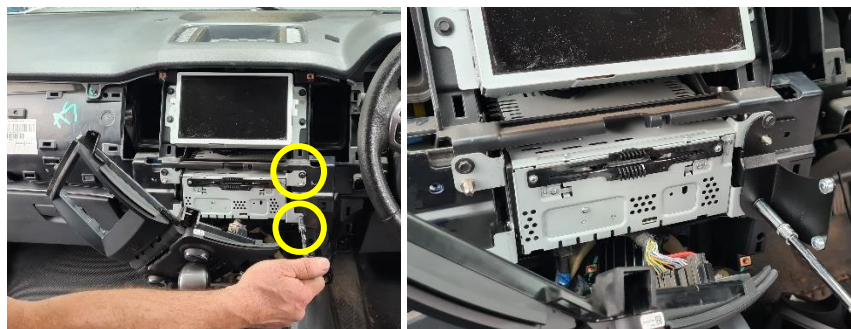

9

Repeat step 7 for the left side.

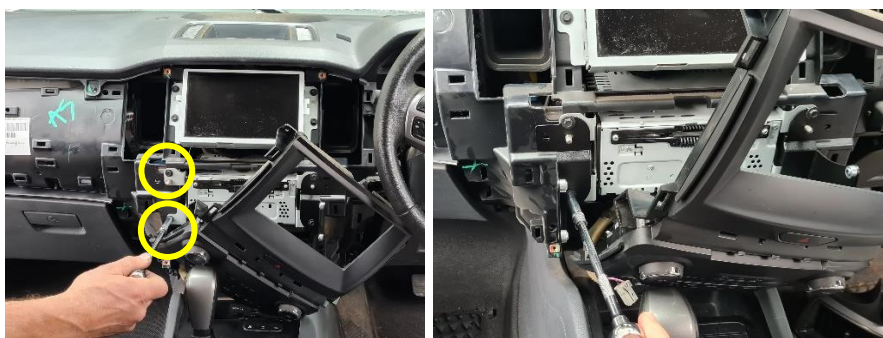

10

Measure & cut 55mm off the side plastic tabs as shown.
Do not cut into front of the console, scrape off 1.5mm with the back of blade as shown.



11

Plug 4 wires, press front console and fix into place using original screws previously removed.



12

Using a sharp blade, carefully scrape both sides of the inner material of the plastic removed in Step 3. Then reattach to dash.



12

Reattach lower plastic trims and air vents.



12

Fix front bracket into place using 4 x screw provided.



Enjoy your new In Dash Mount!

If you have any issues or questions, please contact us.

Industrial Evolution.