

Installation Instructions

Holden Colorado (2012+)



Step

Instructions



1

Carefully unclip the A/C panel and tilt it forward.



2

Ensure that the plastic components at the rear of the A/C dials are not lost or damaged.

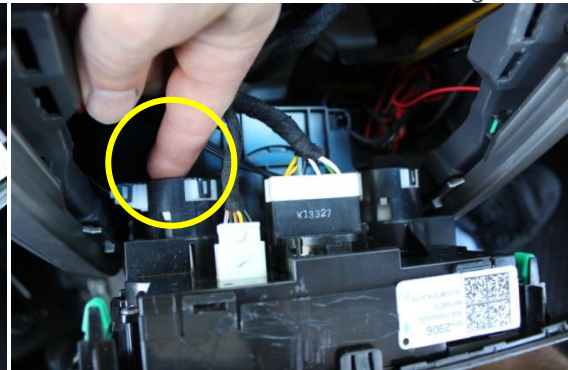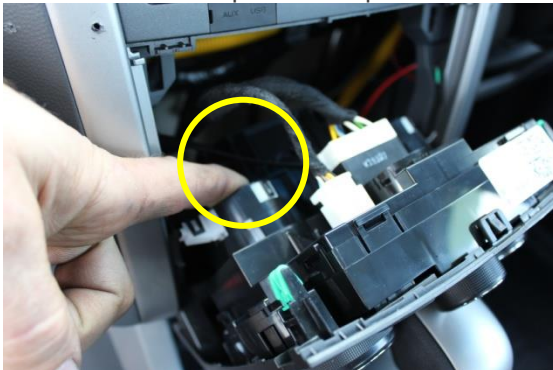

- 3 Locate the two screws below the radio unit and remove them. Unclip the radio panel.



- 4 Bring the radio panel forward and disconnect the hazard light cable.



- 5 Disconnect the radio cable and put the radio unit aside.



- 6 Install the left and right hand side brackets for the In-Dash Mount (three screws in each).



- 7 Reconnect the radio and hazard light cables to the radio panel and press back into place firmly.



- 8 Align the A/C unit and click it into place.



- 9** Affix the Dash Mount bracket to the exposed tabs using the hex-drive screws provided.



If you have any issues or questions, please contact us.

Industrial Evolution.