

## Installation Instructions

Holden Commodore (2013-17) VF



Step

Instructions

1

Remove 2 plastic trim pieces



2

Unscrew 4 hex-bolts



3

Remove & unplug upper screen unit



4

Remove & unplug A/C control unit




5


Unscrew 6 hex-bolts



6 Install L+R side brackets & re-screw 6 bolts from step 5

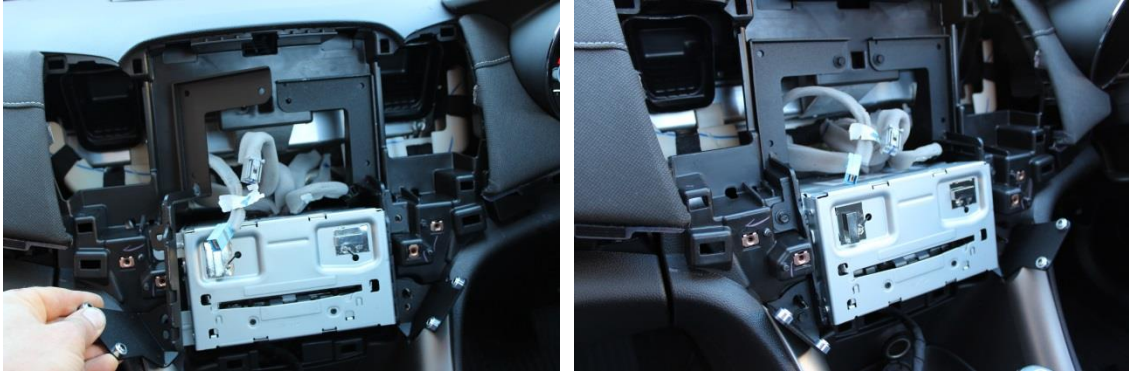

7 Install 4 self-tapping screws

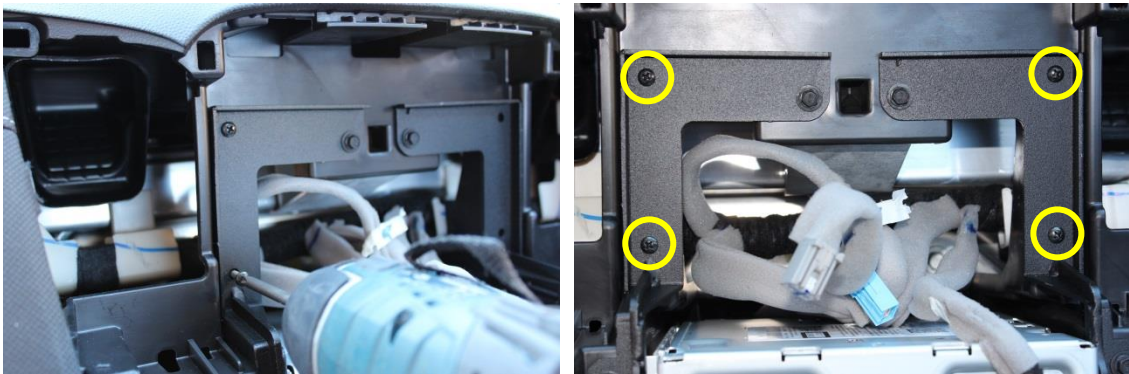

8 Plug in & re-install A/C control & screen units. Re-screw 4 hex-bolts from step 2



9

Re-install plastic trim pieces from step 1



10

Install front bracket with 4 black screws provided



If you have any issues or questions, please contact us.

**Industrial Evolution**