


Installation Instructions

Mercedes-Benz Sprinter (2018+)

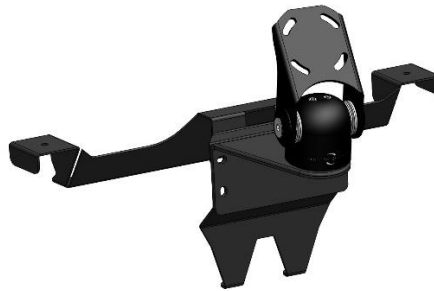

Step

Instructions

1

Remove A/C unit, leaving cable plugged in.



2


Secure lower bracket above the A/C unit by sliding the unit into position.



- 3** Carefully lever and remove the central unit, leaving cables plugged in.



- 4** Place and secure upper bracket at 2 points using self tapping screws provided.

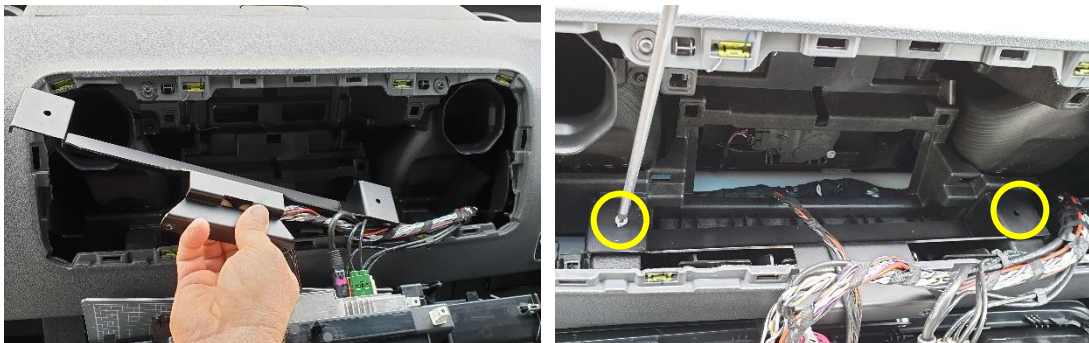

- 5** Replace central unit.



6

Attach the In-Dash mount bracket using the 4 x black screws provided.



If you have any issues or questions, please contact us.
Industrial Evolution