

Installation Instructions

Toyota Land Cruiser 200 (2008+)



Step

Instructions

- 1 Remove left side panel. Then remove 1 x screw, before disconnecting side piece.



- 2 Using a sharp blade, carefully trim 1 x tab as shown on side piece.



- 3 Remove 1 x indicated screw on the side piece and use it to install bracket as shown. Then, using a sharp blade, carefully shave shown area. Take caution to not damage external face.




- 4 Reinstall side piece, side screw and panel to their original state.



- 5 Loosen and set aside left and right vents. Then, remove 2 x screws.



- 6 Using a sharp blade carefully trim indicated area beneath each side vent. Making sure not to damage front face.

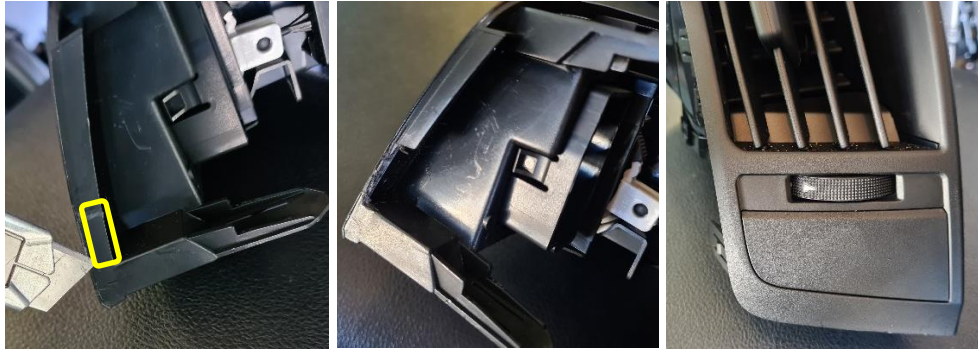

- 7 Install left and right brackets using previously removed screw. Then reinstall side vents.



- 8 Install front bracket using 3 x mounting locations.



Enjoy your new InDash Mount!
If you have any issues or questions, please contact us.

Industrial Evolution