

## Installation Instructions

Toyota LandCruiser 200 (2016+)




Step

Instructions

1

Snap out 2 x lower side panels and remove 2 x air vents as shown.  
 Use 2 x dash screws to fix side bracket. Then repeat for the opposite side bracket.  
 If there is no existing hole, use supplied self-tapper screw.

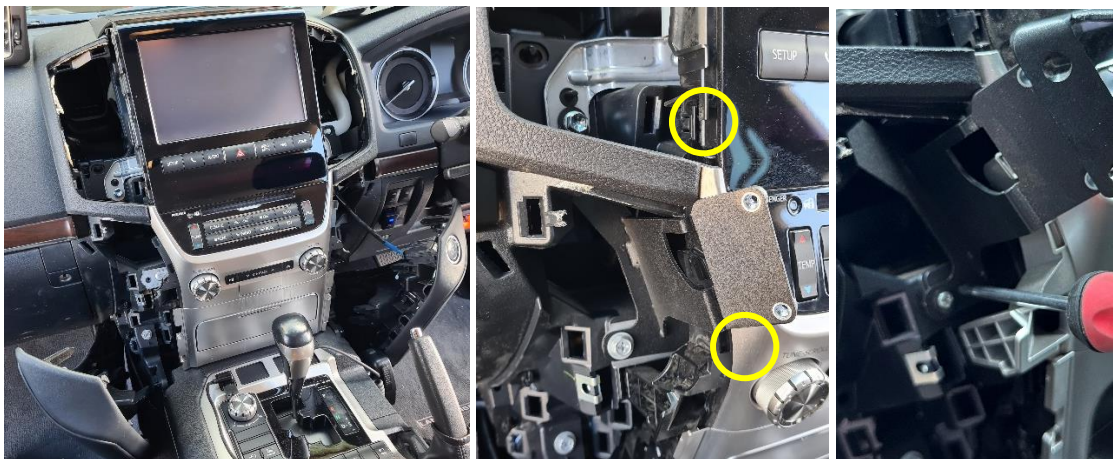

2

Return air vents and side panels to their original position.  
 It is normal for there to be a small gap along the part line.



**3**

Install dash bracket with 4x countersunk M5 screws provided.



Enjoy your new In Dash Mount!

If you have any issues or questions, please contact us.

**Industrial Evolution.**